CHINO



6 m 6


このたびは、チノー製ソリッド・ステート・リレーをお買い上げ

お読みになった後も、いつでも確認できるよう保管して下さい。

お願い

- 本器には半導体を使用しております。半導体は一般的に誤動作したり、故障する場合があります。本器をご使用いただ く場合には、本器の故障による結果として、人身事故・火災事故・社会的な損害等を生じさせないよう安全を考慮し、ま たシステムとしての冗長設計・火災延焼対策設計・誤動作防止設計等の安全設計に十分ご留意下さい。
- 本器の端子ネジが緩んだ状態では使用しないで下さい。端子部の異常発熱により焼損の原因となります。
- 本器の入力回路・出力回路に過電圧・過電流を印加しないで下さい。故障及び焼損の原因となります。

■ 形式のご確認

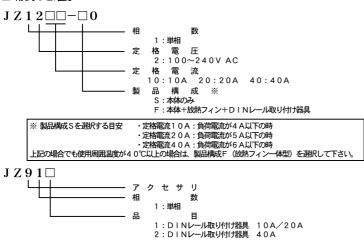


DINレール取り付け器具・放熱フィンを使用しないときにDINレール取り付けをするためのアクセサリ


■ 配線について


- ・焼損、発火の原因となりますので、通電電流に応じた太さの電線をご使用下さい。

・端子ネジは適正なトルクで締め付けて下さい。 (M3.5:0.75~1.18N·m M4:0.98~1.37N·m M5:1.57~2.35N·m)

■ 取り付けについて

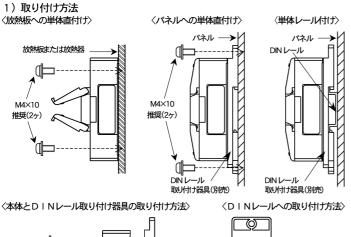

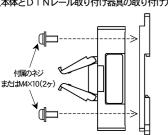

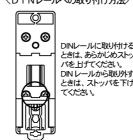

DINレールに取り付ける ときは、あらかじめストッ パを上げてください。

〈放埶フィン一体型直付け〉

1

M4×10

推奨(2ヶ)

■安全にご使用していただくために

記号	注 意 事 項 の 範 囲
<u>⚠</u> 警告	感電など、使用者が死亡または重傷を招く恐れがある場合に、その恐れを避けるための注意 事項を説明しています。
<u>/</u> 注意	使用者が軽傷を招くか、本器または周辺機器を損傷する恐れがある場合に、その恐れを避け るための注意事項を説明しています。

配線をおこなう場合には必ず電源を切った状態でおこなってください。また感電の恐れがあるた め、通電中はカバーを閉めた状態で使用して下さい。

注 涇 蒠

通電中や電源を切った直後は本器の本体、放熱フィン部には触らないで下さい。本体および放熱 フィン部は高温になっているため、やけどの原因になります。

電源を切った直後に出力端子に触れないで下さい。内蔵のスナバ回路に電荷が充電されているた め感電の原因となります。

本器の本体、放熱フィン周囲の空気の対流を妨げないで下さい。本器の異常発熱により出力端子 の短絡故障、焼損の原因になります。

負荷側には短絡電流が流れないようにして下さい。短絡電流が流れた場合、本器が破損する場合 があります。

本器の故障による周辺機器や設備等の損傷を防ぐため、ヒューズの取り付け等の安全措置をした 上でご使用下さい。

■ 仕様

定格入力電圧:5~24V DC

入 カ 消 費 電 流 : 7mA以下 (25℃環境下にて)

定格負荷電圧:100~240VAC

定格負荷雷流:0.1~10A(JZ1210-F0) $0.1 \sim 4 A(JZ1210 - S0)$

 $0.1 \sim 20 A(JZ1220 - F0)$ $0.1 \sim 5 A(JZ1220 - S0)$ $0.5 \sim 40 A(JZ1240 - F0)$ 0.5~6A(JZ1240-S0)

※ 周囲温度により異なります。詳細は「■負荷電流-周囲温度特性表」を参照下さい。

ージオン電流耐量 : 150A(JZ1210) 220A(JZ1220) 440A(JZ1240) (非繰り返し)

用 負 荷 :抵抗負荷

作 時 間: 負荷電流の1/2サイクル+1ms以下 動 間:負荷電流の1/2サイクル+1ms以下 時 復 帰 : 1.6 V (RMS)以下(最大負荷電流にて) 出カオン電圧降下

流:10mA以下(200V ACにて) れ 電

縁 抵 抗:100MΩ以上(500Vメガにて、INPUT端子とLOAD端子、放熱フィン相互間)

電 圧:3000V AC、1分間(1NPUT端子とLOAD端子、放熱フィン相互間) 度:-20~60℃(外結、結露しないこと) 耐 管 温

保 使用周囲温度:-10~50℃(氷結、結露しないこと)

パネル

〈鉛直

使用周囲湿度:45~85%RH


量: 80g(JZ1210-S0) 260g(JZ1210-F0) 10g(JZ911)

20g(JZ912) $1\,0\,0\,g(\,J\,Z\,1\,2\,2\,0\,-\,S\,0)\quad 2\,8\,0\,g(\,J\,Z\,1\,2\,2\,0\,-\,F\,0)$ 100g(JZ1240-S0) 380g(JZ1240-F0)


※ 製品構成S:本体のみ

製品構成F:本体+放熱フィン+DINレール取り付け器具

〈放熱フィン一体型レール付け〉 パネル

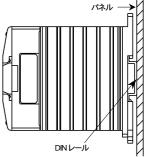


〈直取り付けの場合〉 取り付け穴は、下図寸法で加工して下さい。

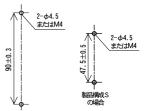

型品構成S+I791□

・放熱板または放熱器への単体直付けの場合、熱伝導性コンパウンド(信越シリコーンG - 7 4 7 など)を放熱板の間に塗布して下さい。

・放熱板を使用しない本体のみでの使用で、取り付け面が金属でない場合は、冷却条件を良くするため、本体裏面(ブレート面)を露出させるか、またはDINレール取り付けて器具(JZ91□)を使用して、パネルに取り付けて下さい。

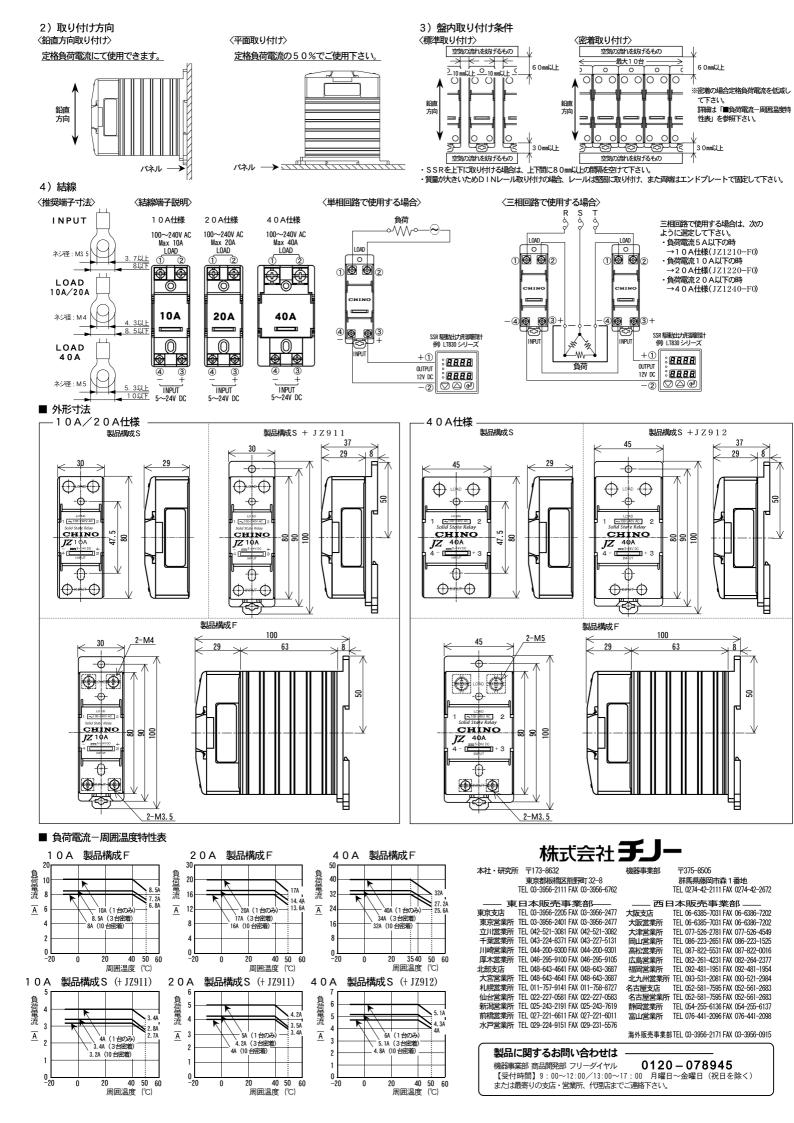

CHINO




Instruction Manual

Thank you for purchasing a CHINO Solid State Relay Confirm this instrument which must be required and read the manual thoroughly for correct use before actually using it. Keep the manual in a safe location so that it is available for reference whenever required

Notice

- The semi-conductors used in this instrument. The semi-conductors may malfunction or get damaged. When setting up your system with this instrument, keep in full mind safety factors, such as redundant configuration, fire hazard measures and foolproof design, in order to avoid personal injury, fire and property damage.
- Never stay a screw terminal loosen at operating of this unit. It causes abnormal heating on the terminal and
- Don't supply a high voltage/current to the input and output. Short circuit failure or burning must be occurred


■ MODEL CHECK

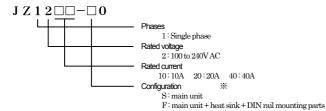

X The standard that "configuration S" is chosen

- · Rated current 10A: When load current is 4A max.
- Rated current 20A: When load current is 5A max.
 Rated current 40A: When load current is 6A max.

When the ambient temperature is higher than $40^{\circ}\!\text{C}$ even in the case shown above, use an SSR mode with built-in heat sink.

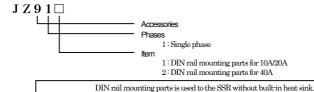


■ CONNECTING


- · Use wire an adequate size for current to be applied. It causes catching fire and burning on SSR.


INSTALLATION


1) Mounting method

< For direct mounting to the panel > < For DIN rail mounting > < For direct mounting to the heat sink >

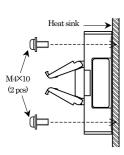

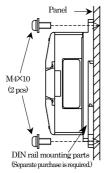


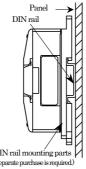


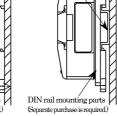

< Mounting on DIN rail >

< Mounting method of the main unit and DIN rail mounting parts >

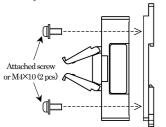


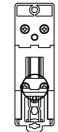


the stopper advance for mounting this instrument on the DIN rail.

Down the stopper for removing this instrument from the DIN rail

< For direct mounting of model with built-in heat sink >

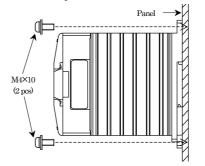

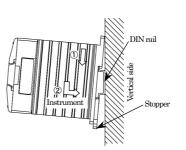

■ FOR SAFE USE

Symbols	Ranges of cautions
⚠ Warning	This symbol describes the cautions for avoiding the possibilities when the user is in danger of causing serious injuries or death due to an electric shock accident or other accidents.
⚠ Caution	This symbol describes the cautions for avoiding the possibilities when the user is in a danger of causing slight injuries or this instrument or peripheral units may be damaged.

Warning

When ready for wiring, the power source should be disconnected first. Further, at operating this unit, the terminal cover should be closed correctly in order to prevent an electrical shock.

Caution

Right after cutting power source or at operating, never touch this instrument especially the heat sink which must be in high temperature at the surface, in order to prevent a burnt in the hand.

Do not touch the output terminal immediately after you turn off the power switch. Otherwise, electric shock may be caused because electricity is charged in the built-in snubber circuit.

Must need an air convection for this instrument or the heat sink. Less convection air produces a heating on this instrument abnormal and causes a short-circuit failure and burning

Do not apply short-circuit current to load side of this instrument. If so, this instrument may damage

To prevent damage of peripheral unit and the equipment, use by using a safety measure such as installation of the fuse

■ SPECIFICATIONS

Rated operating voltage $\,\div\,5$ to $24V\,\mathrm{DC}$ Rated input current :7mA max. (at 25°C) : 100 to 240V AC Rated voltage

: 0.1 to 10A(JZ1210-F0) 0.1 to 4A(JZ1210-S0) Rated current 0.1 to 20A(JZ1220-F0) 0.1 to 5A(JZ1220-S0)

0.5 to 40A(JZ1240-F0) 0.5 to 6A(JZ1240-S0)

** Rated carry current varies depending on the ambient temperature. For details, refer to THE LOAD CURRENT – AMBIENT TEMPERATURE.

Non repetitive surge : 150A(JZ1210) 220A(JZ1220) 440A(JZ1240)

peak on – state current Applied load

: Resistive load

Operate time : 1/2 of load power source cycle + 1ms max. Release time : 1/2 of load power source cycle + 1ms max. Output ON voltage drop : 1.6V (RMS) max.

: 10mA max. (at 200VAC) Leakage current

Insulation resistance : 100M Ω $\,$ min. (at 500V DC, between the input and load terminals, and heat sink) Withstanding voltage 3000V AC for 1 min. (between the input and load terminals, and heat sink)

Storage temperature :-20 to 60°C (with no icing or condensation) Working ambient :-10 to 50°C (with no icing or condensation)


temperature Allowable ambient humidity : 45 to 85%RH

Weight $: \ \ 80 g(JZ1210 \cdot S0) \ \ \ \ 260 g(JZ1210 \cdot F0)$ 10g(JZ911) 20g(JZ912)

100g(JZ1220-S0) 280g(JZ1220-F0) 100g(JZ1240-S0) 380g(JZ1240-F0) * Configuration S: main unit


Configuration F: main unit + heat sink + DIN rail mounting parts

< For DIN rail mounting of model with built-in heat sink >

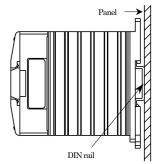


< For direct mounting >

Drill for mounting holes as the following dimension.

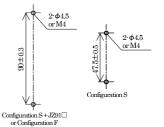

- · When SSR is directly mounted to heat sink, apply heat conductive compound between the SSR and heat sink.
- If the SSR is to be mounted directly onto the control panel without the use of a heat sink, and mounting surface is not made of metal, to offer higher cooling capacity, expose the back of the SSR. Or mounting to the panel by using the DIN rail mounting parts

2) Mounting direction < Vertical mounting > < Horizontal mounting > Use your unit at the rated current.

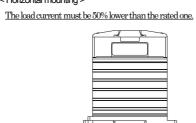


- 3) Panel Mounting < Standard mounting > < High-density or gang mounting > Air flow obstruction Air flow obstruction 60mmmin. 60mmmin. min. IO 0 0 0 0 0 0 0 0 direction direction
 - When SSR is mounted on top and bottom, reserve a space of more than 80mm between each SSR.

Air flow obstruction


• Since the Relay is heavy, firmly mount the DIN rail and fix both ends with end plates for DIN rail-mounting models.

4) Connection

Vertical

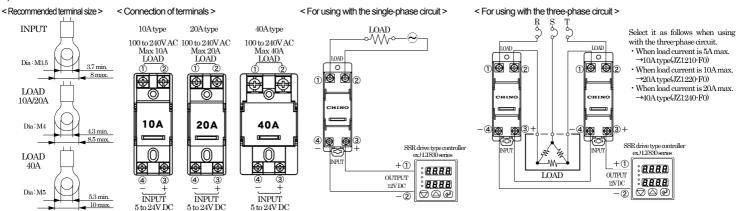


DIMENSIONS

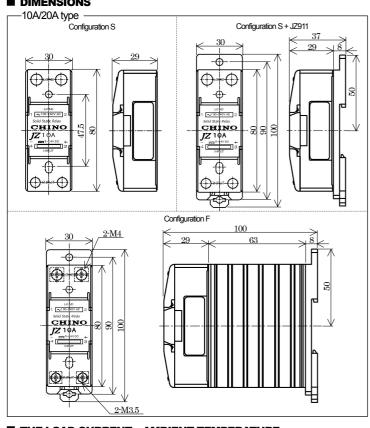

20A type, configuration F


0 20 40 50 Ambient temperature (°C)

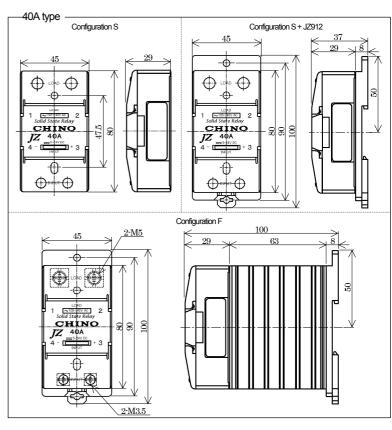


■ THE LOAD CURRENT – AMBIENT TEMPERATURE

10A type, configuration F

0 20 40 50 60 Ambient temperature (°C)

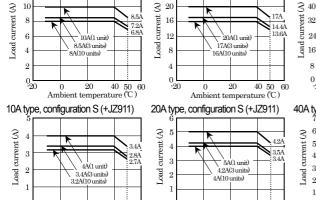

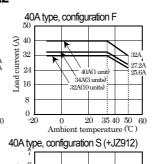

6A(1 unit) 5.1A(3 units 4.8A(10 units) 0 20 40 50 Ambient temperature (°C)

CHINO CORPORATION

32-8,KUMANO-CHO,ITABASHI-KU,TOKYO 173-8632

Telephone: 81-3-3956-2171 Facsimile: 81-3-3956-0915